

INSTRUCTION MANUAL

READ BEFORE USE



POLAR SEAL

COMFORT IN ADVENTURE

POLAR SEAL ORIGINALS



FGSM-N | PS-001M | FGsf-N | PS-001F

Thank you for choosing POLAR SEAL® Originals zip top
Please read the following instructions and warnings carefully before
the first use, and keep this booklet for further reference

WARNINGS

This product is not suitable for:

- Anyone with moderate to severe cardiovascular disease, or anyone fitted with a pacemaker
- Anyone with bleeding or bleeding tendency
- Patients suffering from anaemia and/or hypertension, low blood pressure, or low blood sugar syndrome
- People with open wounds
- Anyone suffering from malignant tumors
- People suffering from illness
- People under medical or hospital care, or emergency care
- Pregnant women, infants, and children
- People suffering from mental illness
- Anyone with sensitive skin, skin abnormality or skin allergy
- Anyone sensitive to heat
- Anyone with a fever
- Medical use
- Persons insensitive to heat and/or other vulnerable persons who are unable to react to overheating
- People who are allergic to PVC (Polyvinyl chloride)

Do not insert pins, or any sharp objects, into or onto your zip top.

Do not sleep while wearing your zip top.

Only use the zip top with a Powerbank with the required specifications 5V/2A (With at least 5000mAh output).

Before you connect the Powerbank to the zip top USB connector, please ensure that your zip top is perfectly dry. Please ensure that the Powerbank is not damaged or compromised in any way.

Before you wash your zip top, please make sure that you remove the Powerbank first, and cover the USB connector with the cap attached to the USB cord.

If the USB cap is lost or damaged, do not replace with another available cap, please contact us to get a proper replacement cap.

Do not bathe, shower, swim or go under water while wearing your Polar seal zip top with or connected to a Powerbank.

In cold weather it is highly recommended to wear extra layers on top of your zip top. For best results, set your heating level to high (red) and your heating zone to upper back (purple).

Please inspect your zip top before each use and ensure that it is not damaged before you connect it to a Powerbank. If you notice any form of damage, in particular to the electrical elements, please stop using it. The manufacturer, our company, Fillony Ltd, its agents, distributors, and employees, sellers, or resellers are not liable for any damages to person(s), objects(s), animal(s), or property(s) resulting from improper use and/or misuse of the zip top, and/or use of the zip tops in conjunction with a power bank that is faulty, not matching the specifications as shown in our Specification section, or not certified CE or UL. The manufacturer, our company, Fillony Ltd, its agents, distributors, and employees, sellers, or resellers, are not liable for any damages to person(s), objects(s), animal(s), or property(s) resulting from the power bank.

Keep your zip top away from any fire and excessive source of heat.

When storing the zip top, allow it to cool down before folding it. Examine the zip top frequently for signs of wear or damage. If there are signs of wear or damage, and/or if the zip top has been misused or does not work, dispose of it correctly as indicated in the DISPOSAL section of this instruction book.

HOW TO OPERATE YOUR ZIP TOP

There are 2 buttons on the POLAR SEAL Originals zip top.



Controls ON/OFF, as well as the temperature level.



Controls the selection of the activated heating zone(s).

STEP 1 :

Open the left side pocket and pull out the USB cable. Connect the Powerbank to this USB cable. Then turn on the Powerbank.

STEP 2 :

Press and hold the On/Off button located at the end of the left sleeve until the light is On and stops blinking.



STEP 3 :

Put the Powerbank inside the pocket and close the zip ensuring that the pocket is fully closed.

STEP 4 :

Press the same button (short press) to set the temperature level to:



LOW
40°C (104°F)
Yellow Light



MEDIUM
45°C (113°F)
Purple Light



HIGH
50°C (122°F)
Red Light

STEP 5 :


Press the following button to select the activated heating zone.



Lower Back



Upper Back

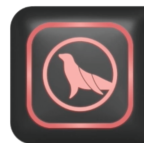

**Upper and
Lower Back**

STEP 6 :

To turn off your zip top,
press and hold the On/Off button until its light goes off.



WASHING YOUR POLAR SEAL Originals zip top

- Before washing, please ensure that you cover the USB connector with its cap. Please also ensure that the Powerbank is removed from the pocket, and that all other items are removed from the pockets.
- Wash only by hand, and separately from other clothes.
- Use water at 30°C to 60°C equivalent to 86°F to 140°F.
- Use a mild detergent.
- Do not dry clean.
- Do not dry in an electric dryer.
- Do not wring.
- Do not use pins or sharp objects.
- Do not iron.

SPECIFICATIONS

Rated voltage: 5V DC

Rated power 7W

Powerbank output: 5V/2A (5000mAh or more)

Temperature range on the garment: 40°C - 50°C (104°F - 122°F)

DISPOSAL

According to the European waste regulation 2002/96/EC the bin symbol on the product or on its packaging indicates that this product may not be treated as household waste. Instead it should be taken to the appropriate collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local council or your household waste disposal service.



POLAR SEAL ORIGINALS



FGSM-N | PS-001M | FGSF-N | PS-001F

Copyright Fillony Ltd 2017 - All rights reserved.
POLARSEAL® is a registered brand name of Fillony Limited Hong Kong

www.polarseal.me

